



Mini Float Valve Installation Instructions

Vertical or Horizontal Mount

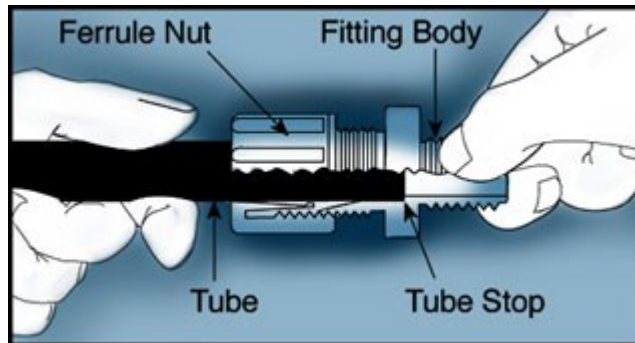

1. Cut the 1/4" tubing end squarely.
2. Insert the tubing through the back of the nut until it reaches the tube stop, about one and a half inches (see illustration above).
3. Hand tighten the nut, then snug up with a pair of pliers. Be careful not to over tighten and strip the fittings threads.
4. The nut should be retightened after water flows through the valve due to the temperature change.

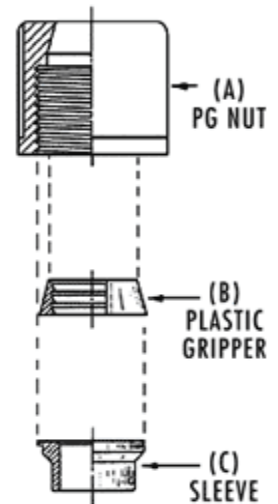

Mounting the float valve on the reservoir will require a 7/16" hole. Use a 1/4" drill bit as a pilot hole then a 7/16" drill bit.

